

TRX baterie Sony/ 1400 mAh/ Cyber-shot DSC-H10/ H20 /N1/ N2/ T100/ T20/ W80/ W100/ W130/ W150/ neoriginální

cena vč DPH: **310 Kč**

cena bez DPH: 256 Kč

Kód zboží (ID): 4951149

PN: TRX-NP-BG1-L

Záruka: 24 měsíců



TRX pro Sony 1400 mAh

Kompatibilní baterie pro fotoaparáty Sony.

ZÁKLADNÍ SPECIFIKACE

Kapacita: 1400 mAh

Technologie baterie: Li-iontová

Nahrazuje baterie: BC-CSG, BC-CSGD, BC-CSGE, BC-TRG, NP-BG1, NP-FG1

Pro fotoaparáty: Sony Cyber-shot DSC-HX5B, DSC-HX5V, DSC-HX5V/B, DSC-HX7V, DSC-HX7VB, DSC-HX7VL, DSC-HX7VR, DSC-HX9V, DSC-H10, DSC-H10/B, DSC-H20, DSC-H3, DSC-H3/B, DSC-H50, DSC-H50/B, DSC-H55, DSC-H7, DSC-H7/B, DSC-H70, DSC-H70B, DSC-H70L, DSC-H70R, DSC-H70S, DSC-H9, DSC-H9/B, DSC-N1, DSC-N2, DSC-T100, DSC-T100/B, DSC-T100/R, DSC-T100S, DSC-T20, DSC-T20/B, DSC-T20/P, DSC-T20/W, DSC-T25, DSC-WX1, DSC-WX1B, DSC-WX1N, DSC-WX1S, DSC-WX10, DSC-WX10B, DSC-WX10N, DSC-WX10V, DSC-W100, DSC-W100B, DSC-W100S, DSC-W110, DSC-W115, DSC-W120, DSC-W120/B, DSC-W120/L, DSC-W120/P, DSC-W125, DSC-W130, DSC-W130/B, DSC-W130/P, DSC-W150, DSC-W150/B, DSC-W150/N, DSC-W150/R, DSC-W170, DSC-W170/B, DSC-W170/N, DSC-W170/R, DSC-W200, DSC-W210, DSC-W215, DSC-W220, DSC-W230, DSC-W270, DSC-W275, DSC-W290, DSC-W30, DSC-W30L, DSC-W30S, DSC-W30W, DSC-W300, DSC-W35, DSC-W40, DSC-W50, DSC-W50B, DSC-W50S, DSC-W55, DSC-W55/B, DSC-W55/L, DSC-W55/P, DSC-

W70, DSC-W70B, DSC-W70S, DSC-W80, DSC-W80/B, DSC-W80/P, DSC-W80S, DSC-W80/W, DSC-W85, DSC-W90, DSC-W90/B, DSC-W90S, DSC-HX20

TRX pro Sony 1400 mAh

Kompatibilní baterie pro fotoaparáty Sony.

ZÁKLADNÍ SPECIFIKACE

Kapacita: 1400 mAh

Technologie baterie: Li-iontová

Nahrazuje baterie: BC-CSG, BC-CSGD, BC-CSGE, BC-TRG, NP-BG1, NP-FG1

Pro fotoaparáty:

Sony Cyber-shot DSC-HX5B, DSC-HX5V, DSC-HX5V/B, DSC-HX7V, DSC-HX7VB, DSC-HX7VL, DSC-HX7VR, DSC-HX9V, DSC-H10, DSC-H10/B, DSC-H20, DSC-H3, DSC-H3/B, DSC-H50, DSC-H50/B, DSC-H55, DSC-H7, DSC-H7/B, DSC-H70, DSC-H70B, DSC-H70L, DSC-H70R, DSC-H70S, DSC-H9, DSC-H9/B, DSC-N1, DSC-N2, DSC-T100, DSC-T100/B, DSC-T100/R, DSC-T100S, DSC-T20, DSC-T20/B, DSC-T20/P, DSC-T20/W, DSC-T25, DSC-WX1, DSC-WX1B, DSC-WX1N, DSC-WX1S, DSC-WX10, DSC-WX10B, DSC-WX10N, DSC-WX10V, DSC-W100, DSC-W100B, DSC-W100S, DSC-W110, DSC-W115, DSC-W120, DSC-W120/B, DSC-W120/L, DSC-W120/P, DSC-W125, DSC-W130, DSC-W130/B, DSC-W130/P, DSC-W150, DSC-W150/B, DSC-W150/N, DSC-W150/R, DSC-W170, DSC-W170/B, DSC-W170/N, DSC-W170/R, DSC-W200, DSC-W210, DSC-W215, DSC-W220, DSC-W230, DSC-W270, DSC-W275, DSC-W290, DSC-W30, DSC-W30L, DSC-W30S, DSC-W30W, DSC-W300, DSC-W35, DSC-W40, DSC-W50, DSC-W50B, DSC-W50S, DSC-W55, DSC-W55/B, DSC-W55/L, DSC-W55/P, DSC-W70, DSC-W70B, DSC-W70S, DSC-W80, DSC-W80/B, DSC-W80/P, DSC-W80S, DSC-W80/W, DSC-W85, DSC-W90, DSC-W90/B, DSC-W90S, DSC-HX20